HONDA **INSTALLATION INSTRUCTIONS**	Accessory **BED EXTENDER P/N 08L73-HL3-A00**	Application **SXS700M4/M2**	Publication No. **MII 14607** Issue Date **January 2014**

PARTS LIST

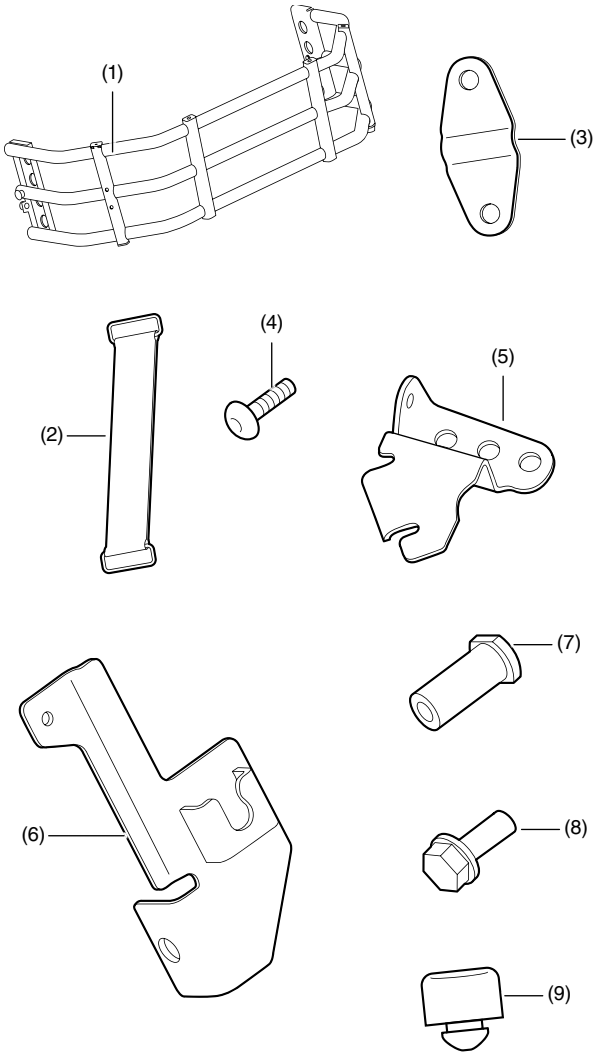

No.	Description	Qty
(1)	Bed extender	1
(2)	Strap	2
(3)	Strap bracket	2
(4)	6 x 12 mm socket bolt	4
(5)	Tailgate bracket	2
(6)	Bed extender bracket	2
(7)	Threaded collar	2
(8)	6 mm collar bolt	2
(9)	Rubber stop	6

TOOLS AND SUPPLIES REQUIRED

Hex wrench (5 mm)
Hex wrench (6 mm)
Phillips screwdriver
Flathead screwdriver
Socket (10mm)
Socket extension
Torque wrench
Ratchet
Drill
7 mm (9/32 in) drill bit
Step drill bit up to 13 mm (1/2 in)

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm bolt	12	1.2	8.9
8 mm bolt	18	1.8	13.3
10 mm bolt	39	4.0	28.8

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged.

SPECIAL NOTE

- Follow all instructions for the SXS700M4 (4P) model.
- Skip steps 6, 7, 8, and 10 on the SXS700M2 (2P) model.

© 2014 Honda Motor Co., Ltd. - All Rights Reserved.

INSTALLATION

1. Refer to the Service Manual for the vehicle, remove the rear door (4P only), bedside, and inside cover (4P only).
2. Remove the top 6 mm socket bolt from the rear frame and save it for reuse.

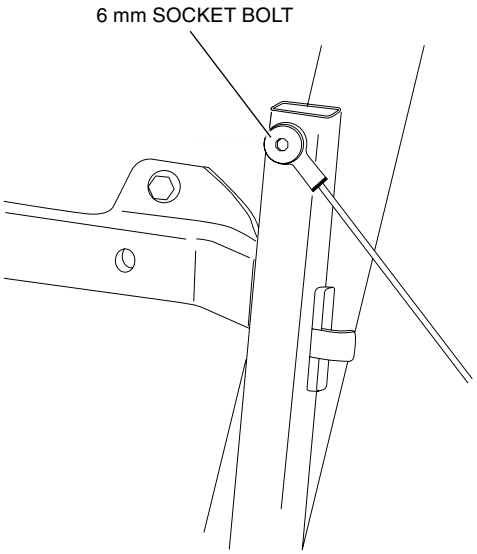

3. Place the bed extender bracket into the position shown and temporarily install the 6 mm socket bolt. Using the bracket as a template, mark the hole location with a marker.

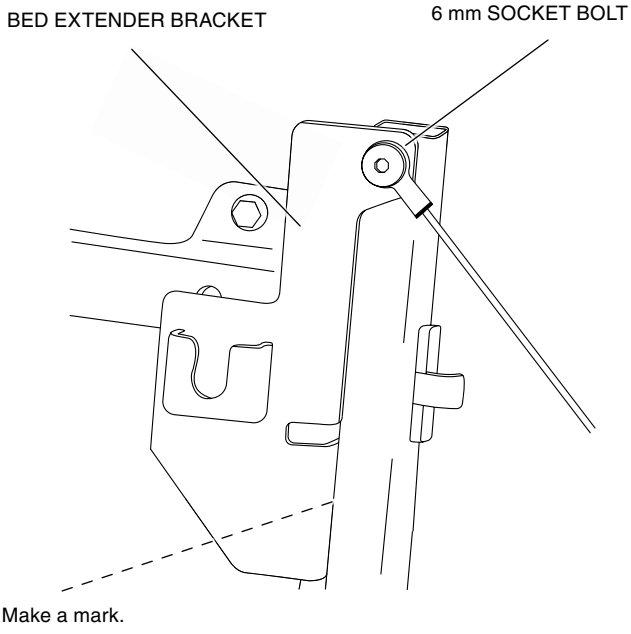

4. Remove the 6 mm socket bolt and bed extender bracket. Drill a 7 mm hole in the vertical frame at the marked point.
   - **This hole will go through both sides of the frame.**

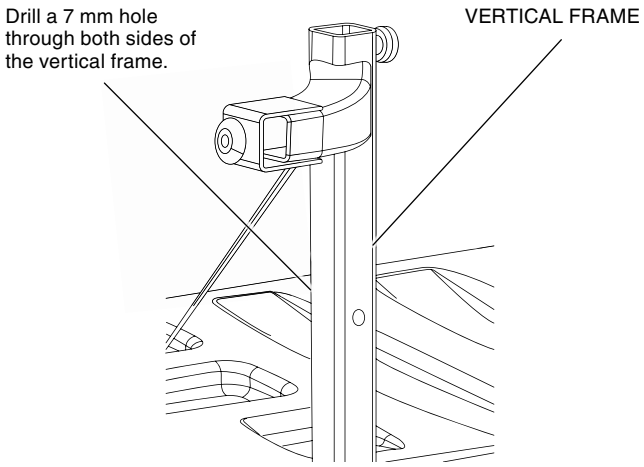

5. Using the 7 mm hole as a pilot, increase the hole size to 13 mm through the *front* face of the vertical tube as shown.
   - **This hole should only go through the front face.**

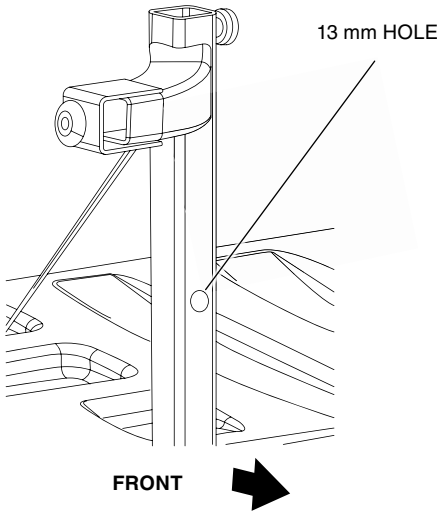

6. 4P Only: Position the rear bedside and inside plastic cover and tighten the lower phillips screw only.

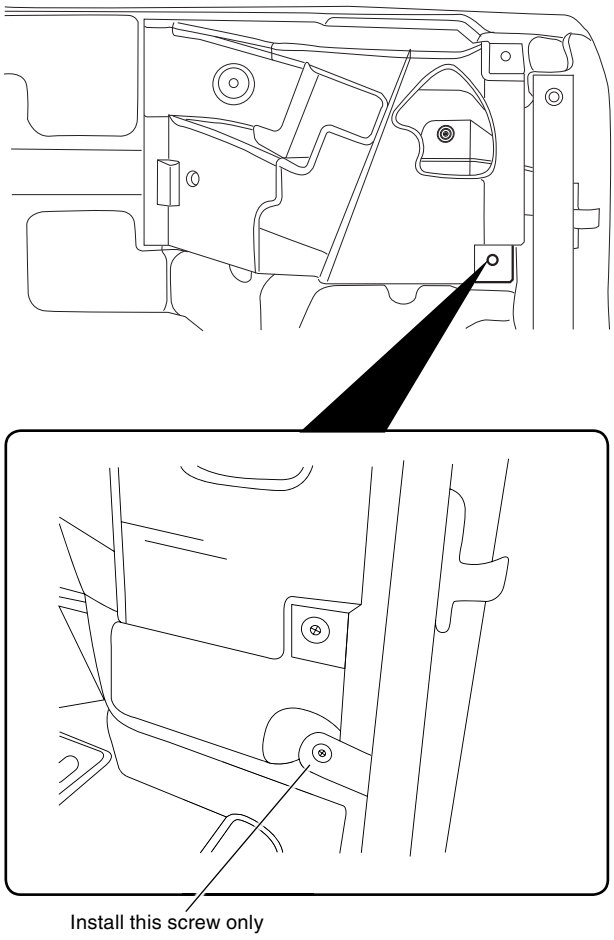

7. 4P only: Loosely attach the bed extender bracket with the 6 mm socket bolt and swing it out of the way.

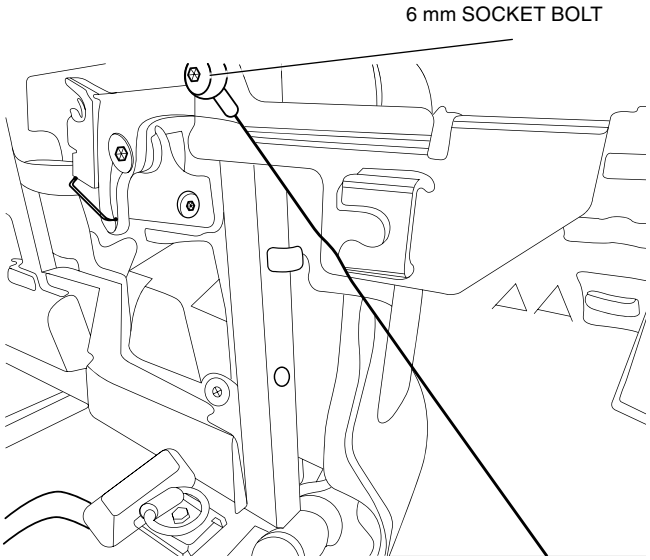

8. 4P only: Slide the rear bedside and inside plastic cover forward.

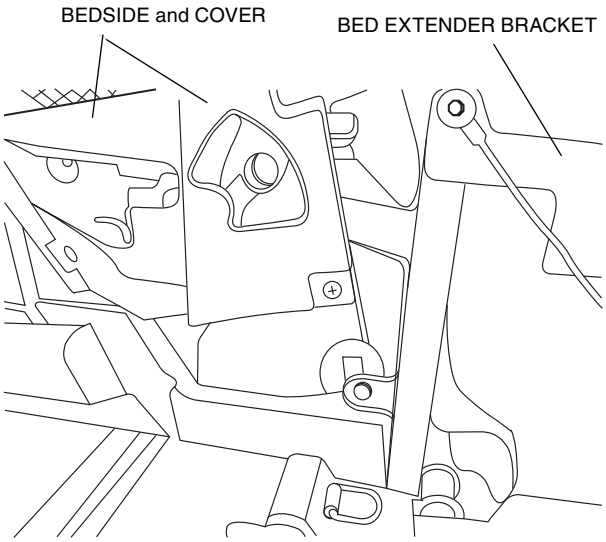

9. Swing the bed extender bracket in position and install the collar and 6 mm flange bolt. Tighten the 6 mm socket bolt and the 6 mm flange bolt to the specifications in the Torque Chart.

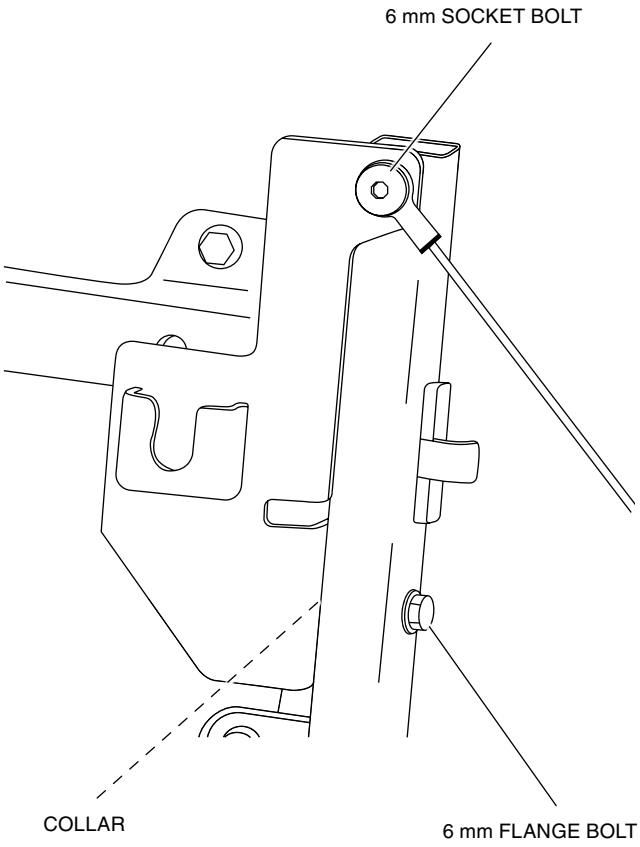

10. 4P only: Slide the rear bedside and inside cover back into position.

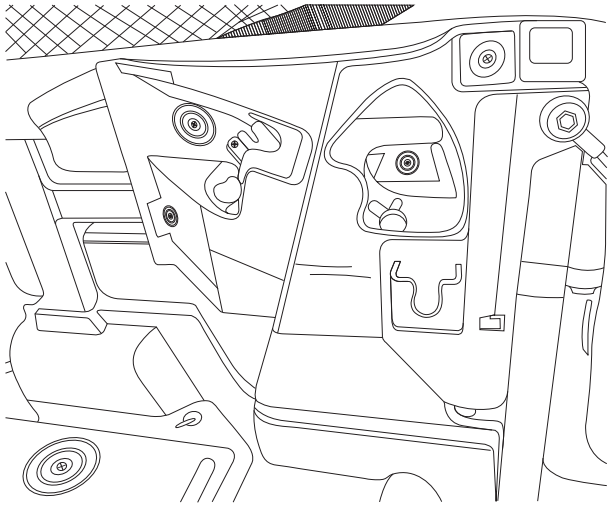

11. Continue the rear bedside, inside cover (4P only) and rear door (4P only) installation as instructed in the Service Manual.

12. Remove the tailgate stay cable and replace the bracket with the accessory tailgate bracket. Reinstall the tailgate stay cable and tighten the 6 mm bolts to the specification in the Torque Chart.

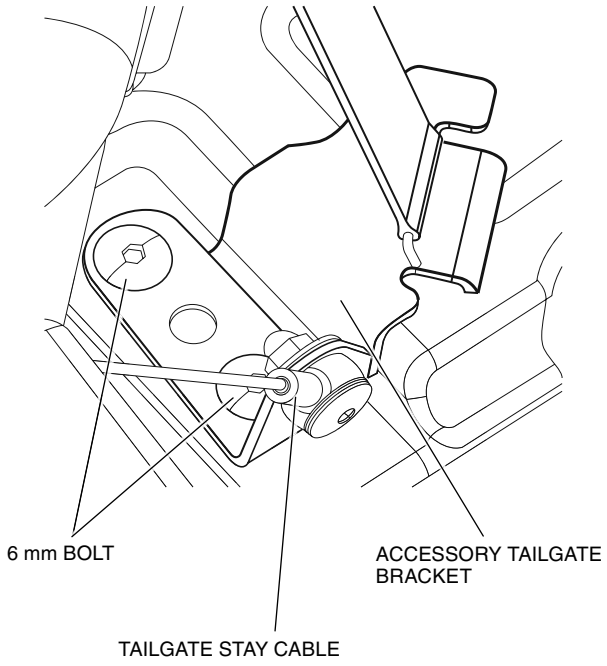

13. Repeat Steps 1-12 for the opposite side.
14. Install the rubber stops into bed extender holes at the .

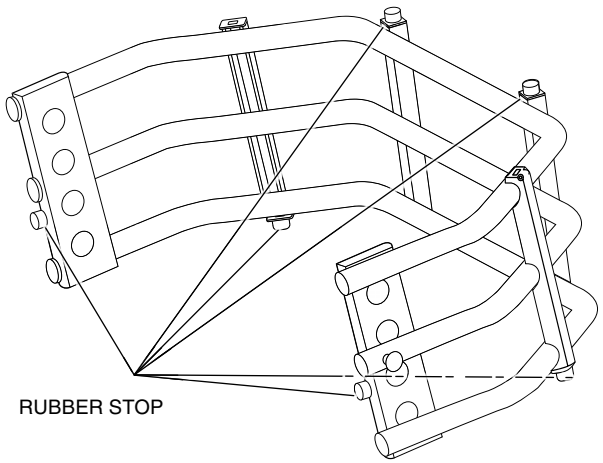

15. Holding bed extender assembly vertically, gently lower it into the bed extender brackets.

Gently lower into the bed extender brackets.

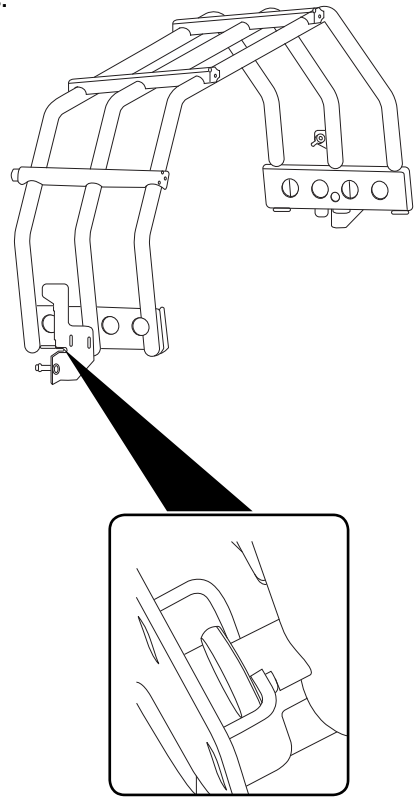

16. Install the strap and the strap bracket to the bed extender using 6 x 12 mm socket bolts.